

USER MANUAL

PLEASE READ THE INSTRUCTIONS CAREFULLY BEFORE RIDING



TEMPERATURE CONTROL



NFC



DISC BRAKE



TUBELESS TYRE

CONTENT

GENERAL INFORMATION	1
VSETT RANGE-CONTROL LAYOUT,FUNCTIONS AND SPECIFICATIONS	2~3
INTELLIGENT TEMPERATURE CONTROL MANAGEMENT SYSTEM	4~5
VSETT DISPLAY OPERATION AND PROGRAMMING	6~14
EXTERNAL BATTERY INSTALLATION	15
ASSEMBLE THE SCOOTER	16~17
FOLDING HANDLE BARS	18~19
BATTERY AND CHARGING	20~21
PRE RIDE CHECKS	22
WARNING	23
LIMITED WARRANTY	24~25
ERROR CODES	26~27
AFTER-SALES SERVICE	28~29

READ THIS MANUAL BEFORE USING

IMPORTANT INFORMATION

WHY IS IT NECESSARY TO READ THIS MANUAL BEFORE OPERATING?

This manual was written to help you understand the proper use and maintenance of the VSETT line of Electric Scooter.

It is important to understand the functions and features of the new VSETT before operating it as it will allow you to enjoy the most of it from the first and every ride.

It is also important for you to note that the first trial of the VSETT should be in a remote area where obstacles are minimal to none.

The VSETT unit will require some adjustments and break-in period for all moving parts to adjust themselves into the correct position.

BEFORE RIDING: Please ensure that the folding mechanism is firmly locked in place and that the safety lock is engaged.



DISCLAIMER & WARNING

The product and its brand VSETT is not liable for any accidental damages related to the usage of this product.

WARNING!

The responsibility for VSETT maintenance is yours! Proper and frequent maintenance will reduce risks of injuries.

- ALWAYS WEAR A HELMET WHEN RIDING
- ALWAYS FOLLOW LOCAL LAWS AND REGULATIONS
- NEVER RIDE SCOOTER IN POOR VISIBILITY
- DO NOT DO STUNTS, WHEELIES or JUMPS IF YOU DO NOT HAVE THE PROPER SAFETY GEARS.

VSETT *MINI*

MAX SPEED 30KM/H

DISC BRAKE

LED SPOTLIGHT

NFC KEY LOCK

CONTROLLER 36V 15A

MAX RANGE SINGLE BATTERY 25KM

DUAL BATTERY 38KM

MOTOR POWER 350W

BATTERY 36V7.8AH

FOLDING SWITCH

REAR SHOCK SPRING

REAR TUBELESS TIRE 8*2INCH

FRONT TUBELESS TIRE 8*2INCH




Model	VSETT MINI
Battery	36V 7.8Ah
Tire	Tubeless Tire + Solid Tire
Brakes	Disc brake
Max Range(Single battery)	25KM
Max Range(External battery)	38KM
Max Speed	30KM/H
Weight	18KG
Suspension	Front and rear double spring shock absorption
Lights	Front spotlight + Brake light
Motor Power	36V 350W Brushless Motor
Controller	36V (15A)
Max Load	90KG



Maximum load and speed may vary depending on the rider's weight, riding style and terrain.



INTELLIGENT TEMPERATURE CONTROL MANAGEMENT SYSTEM

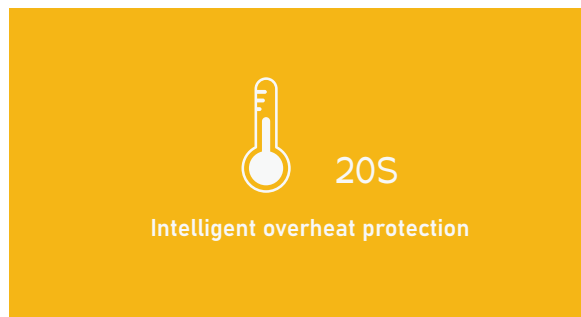

The motor controller/s fitted to your VSETT electric scooter feature overload protection. Should the controller temperature exceed the safety threshold, the management system will enter a 20s protection cycle. Should you experience a loss of power due to overload, please stop riding and allow the controller time to cool.



VSETT series electric scooter intelligent temperature control system

(A 75KG load was tested according to the summer climate in Ningbo, China)

Model	VSETT MINI
Protection temperature (According to the local topography $\pm 5^{\circ}\text{C}$)	100 $^{\circ}\text{C}$
Protection time (According to local climatic conditions $\pm 5\text{s}$)	20s



NFC card area


Basic operation:

1、Function


1. Displayed content

Speedometer / Odometer / Trip meter / Battery level / Cruise-control active light / Gear indicator / Fault warning light

2. All content on display(power on within 1 second)

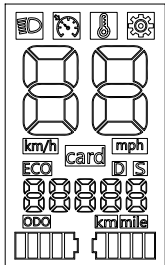

3.1 Speed display area

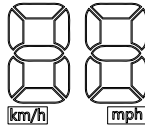

Unit: MPH, KM/H

The speed signal is taken from the Hall signal inside the motor. Sent to controller by controller (Time of single Hall period, unit: 1MS). The display calculate the true speed based on wheel diameter and signal data calculate the true speed (The motor Holzer also needs to set the number of magnetic steel)

3.2 Vehicle power gear adjustment,    ECO is Ecological mode, D is Drive mode, S is Sport mode;

3.3 vehicle status display area



High temperature warning;



The headlight turns on the prompt;



Constant speed cruise hint;



Set mode;

Display P-Codes(programming codes)

To access this menu, long-press . Use  button to scroll through P-codes,  to change parameter

P00: LED brightness, level 0 is the darkest, level 7 is the brightest

P01: Mileage Unit : 0: KM; 1: MILE ; default: KM

P02: Sleep time: 0, not sleep; The other numbers are sleep times, the range : 1-60; unit :minute; default : 5

P03: Limit speed: the range 0-100%, Default : 100%

P04: Zero start, non-zero start Settings, 0: zero start; 1: non-zero start; Default: 0

P06: Soft and hard start strength, the range: 1-5, 1: Weakest, 5: Strongest, Default: 3

P07: 0: Can't cruise , 1: can cruise; Automatic cruise is optional , Default: 0




P09: Binding ID card, shows ID card quantity

2、 Introduction of buttons and interfaces



2. When it is power on, long-press hold button continuously for 2s  to turn off,press  to change gear.

3. Long-press  to enter P-code menu - refer to functions on page 18.

Enter the menu setting interface, press  to increase or decrease the value, after the modification is finished;Press  to switch to the next parameter and save the value of the previous parameter;After parameter modification, long press  again to exit the setting interface, or wait for 8 seconds for automatic exit and save parameters

3、 Card binding instructions

1.The instrument is not bound to ID card:

After starting up, the LCD displays the normal contents. At this time, the meter can directly enter the working state.

The diagram below:



2.How to bind ID card:

CARDS are bound by factory default

Late setting: When using mobile phone or NFC functional card binding, refer to the following methods

On the p09 interface, bring the NFC device or card close to the sensing area, and the number +1 at the bottom means the binding is successful.

Click **M** 15 times in a row display 0. At this time, all ID CARDS that have been unbound are displayed.


3. The instrument has been bound with ID card: after starting up, the LCD displays card, and the swiping indicator flashes, indicating that the card needs to be swiped to start up. At this time, the accelerator does not work.

The diagram below:




Note: Due to the upgrade of the company's products, some of the displayed contents of the products you get may be different from the instructions, but it will not affect your normal use.

If the NFC cards are lost accidentally, you can try to contact the local agents. (each E-Scooter is equipped with 3 keys).

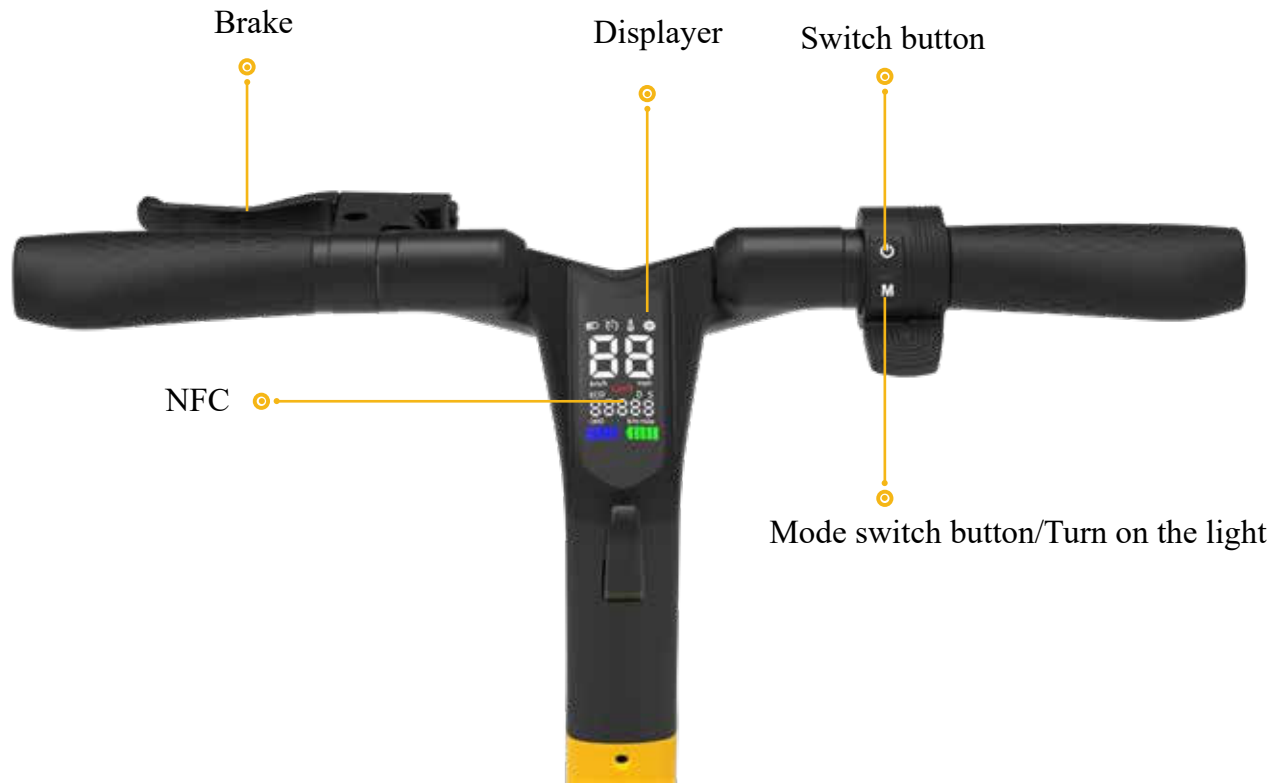

Power On/Off	Long-press the power button [3] for 2 seconds to turn on/off the scooter. then use NFC card to active it The scooter turns off automatically if not used for 90 seconds
Speed Control	While stationary, and with the power on, Long-press the [3] button to cycle through the three different speed levels 1 to 3. Use the throttle to control the speed within each speed level.
Headlight	While power is on, press [4] button to turn on or off headlight.


TURNING IT ON

Press the  for 3 seconds and wait to be prompted for the Token (Card).


Tap the Token (Card) to the IR reader NFC



PSETTING


Press and hold both  simultaneously for 5 seconds to access the P Setting interface.

CHANGING OF SPEED

Press the  to toggle between increasing between ECO to S.

Function is to limit max limit, S being themax speed able to achieve.

1 Open the dust cover

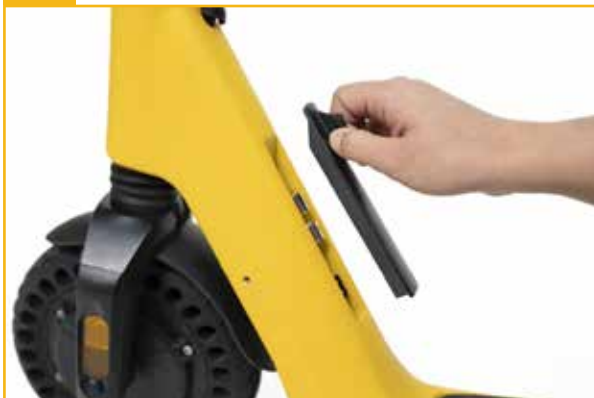

2 Insert external battery



3 Make sure the battery is in place



4 Tighten the fixing screws on both sides



1

Check whether the accessories are complete



2

Apply screw glue to the handlebar threads on the left



3

Tighten the left handlebar



4

After adjusting the position of the brake lever, tighten the screw



5

Install the grip



6

Tighten the headless screw below



7

Apply screw glue to the handlebar threads on the right



8

Tighten the handlebar on the right



9

Install the accelerator clip (pay attention to the notch direction of the clip)



10

Tighten the headless screw below



11

Tuck the wires into the handlebar after connecting the wires



12

Install the grip



Expand Folding

1

Pull the safety clip up



2

Open the foldable buckle outwards



3

Simultaneously fold the handle bar down



4

Folding is completed by inserting the hook into the slot



5

Press the rear pedal all the way



6

Pull up the handlebar



7

Confirm that the security clip is fully expanded



BATTERY

- Do not operate the scooter while charging
- Do not store the scooter over a long period of time with an almost empty battery.
- From time to time, discharge the battery by riding. Have the battery recharge again and make sure to not leave battery fully empty.

DO NOT DO ANY CHARGING IF THE BOARD:

- is broken
- emits an unusual odour or colorless liquid.
- the bottom of the deck or it as a whole gets into excessive heating
- leakage is present.

Avoid contacting with substance or meddling with a bloated battery. Keep the battery away from children, pets or direct heat. Exposure to the battery voltage may cause death or serious injury.

The use, storage or charging of the VSETT battery outside specified limits may result in the annulment of the warranty, battery damage and an effective battery charging,



It is important to fully charge the battery before your first use of the scooter.

First Charge

Your scooter's battery comes with these built-in features:

1. Balanced charging protection: During charging, the battery automatically balances the voltage among the internal cells to protect each cell.
 2. Over-charging protection: The battery stops charging automatically when full to protect against damage.
 3. Over current protection: The battery automatically stops charging if the voltage is higher than prescribed voltage to protect the battery.
 4. Over discharging protection: The battery automatically stops discharging when its voltage drops below Under voltage value to protect the battery.
 5. Short-circuit protection: the battery automatically stops output in the case of a short-circuit.
-

How to charge

1. Ensure that scooter is TURNED OFF. Connect external power charger to scooter.
2. Connect charger to electrical outlet, then turn on the power of electrical outlet.
3. Do not charge the batteries in temperatures below 5 °C or above 40 °C. The battery may stop the charging process.
4. Charging Light **RED** - Battery is charging.
Charging Light **Green** - Battery is fully charged.

PRE RIDE CHECKS

1



The tire is pressurized to the standard value on the tire

2



Brakes are working properly

3



Ensure folding mechanism is fully locked in place with a CLICK sound



WARNING!

Certain countries of regions require safety devices or gear. It is your responsibility to know the state laws and follow them. However, we strongly recommend safety gears to be donned before operating the device.

TIRE AIR PRESSURE: THE TIRE IS PRESSURIZED TO THE STANDARD VALUE ON THE TIRE

SAFETY GEAR

Helmet: Most common and serious injuries from riding are head injuries. This can be prevented by donning a helmet. You must wear a helmet when riding the VSETT. The helmet must be worn according to their instruction

MECHANICAL SAFETY

Before using the VSETT:

- 1) Always perform a visual inspection of all screws and nuts are tight and in place. If anything is amiss or missing and you are unsure, please bring it back to the authorized distributor.
- 2) Check the tyres and wheels and that it is not showing signs of wear and tear; not in need of replacement. Always ensure that the brake mechanism is not touching the wheels and allows free spinning.
- 3) Always perform mechanical checks of brakes and other parts of the scooter that allows visibility, safety and functionality of the scooter to be

BY USING THIS PRODUCT YOU AGREE TO THIS LIMITED WARRANTY. PLEASE READ THIS LIMITED WARRANTY CAREFULLY.

To benefit from the limited warranty, the customer is advised to read Vsett Warranty terms together with the “care and maintenance” sections provided in the user manual. This limited warranty applies to the extent permitted by law and unless restricted or prohibited by law.

Limited Warranty Details

1. Vsett warrants that Vsett scooter products (“Products” or “Product”), are free from defects in material and workmanship, according to the following terms and conditions:
2. This Limited Warranty extends to the original purchaser of the Product warranted under this warranty and to each transferee of the Product during the first _____ months beginning on (date) _____ as stated below (“Warranty Period”).

This Limited Warranty covers the Product and each of its following component parts (“Components”) only:

- a. Hub motor;
 - b. Battery packs (except if battery was short circuited or seals of the battery enclosure or cells were broken or were tempered or the battery was used in equipment other than its intended use);
 - c. Controller;
 - d. Throttle and battery indicator unit;
 - e. Charger unit;
 - f. All other electrical wiring and components.
3. During the Warranty Period, Vsett or its authorized service centres will repair or replace, at Vsett’s option and without costs to the customer, any defective Components with new or factory rebuilt replacement items, and return the Products to the customer in working condition, provided that the terms and conditions of this Limited Warranty are met. All defective Products or Components that have been replaced shall become the properties of Vsett.
 4. Products and/or Components that have been repaired or replaced pursuant to the paragraph above will be covered by this Limited Warranty for the balance of the Warranty Period.
 5. This Limited Warranty will only be effective when presented together, to either Vsett or its authorised centres, with proof of date and place of purchase of Products such as the purchase receipt.

What this Limited Warranty does not cover:

1. Products used for commercial purpose(s) including but not limited to leasing/hiring, use in competitions etc
2. Any logistical costs of returning the Product to Vsett or its authorised service centres for servicing or the cost of returning the Product to the customer after servicing.
3. Defects or damages resulting from use of the Product(s) other than its normal and customary manner as stated in the user manuals accompanying the Products.
4. Defects or damages from improper storage, exposure to moisture or dampness, modifications, connections, repairs (except as carried out by Vsett or its authorised centres), misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of Vsett, including damage caused by dropping, blown fuses, spills of food or liquid.
5. Defects or malfunctions of the product not notified by customer during the Warranty Period.
6. Products which have had their serial numbers removed or tampered with.
7. This Limited Warranty is in lieu of all other warranties, express or implied either in fact or by operations of law, statutory or otherwise, including, but not limited to any implied warranty of marketability or fitness for a particular use.

5. Defects or malfunctions of the product not notified by customer during the Warranty Period.
6. Products which have had their serial numbers removed or tampered with.
7. This Limited Warranty is in lieu of all other warranties, express or implied either in fact or by operations of law, statutory or otherwise, including, but not limited to any implied warranty of marketability or fitness for a particular use.

Disclaimer:

1. The customer understands the risk of serious injury or death in the operation of such products and shall agree to take the **necessary precautions** and exercise **good judgement** to avoid hazards and dangerous situations which may result in serious injury or death.
2. The customer shall agree to indemnify and hold harmless Vsett from all injuries or death arising from the operation of the product.
3. The use of safety and protective gear such as bicycle helmets is strongly encouraged. And so is the use of Good Judgement.
4. The customer is advised to take the following precautions:
 - a. Do not ride on wet ground or in heavy rain;
 - b. Take corners slowly and look out for pedestrians;
 - c. Avoid potholes, kerbs and debris on the ground;
 - d. Keep tires pumped to the specified pressure;
 - e. Dismount in places with heavy human traffic and push the scooter manually;
 - f. Service the product every 3 months on regular usage, 6 months for non-frequent usage;
 - g. Do not use product on public roads and respect local road regulations.

How to request service under this Limited Warranty:

To obtain performance of Vsett to repair and/or replace the Product or its Components under this Limited Warranty, the customer must, during the Warranty Period:

1. Bring this Limited Warranty, proof of purchase and the Product to Vsett.
2. Provide Vsett with a written description of the problem.

The average repair time is 1 to 3 days, not including shipping time to and from our service centre.

This warranty does not cover the shipping costs associated with the transportation of the scooter to and from our service centre, and a fee will be charged for return shipping or pick up and delivery service.

What can the consumer do in case of a dispute with Vsett

The consumer and Vsett agree that in the event of a dispute arising from the material and workmanship of the Product; or from this Limited Warranty, parties will attempt to first resolve the matter by negotiating in good faith.

ERROR CODE

Error Code	Fault	Diagnostic Step	Resolution
00	Normal Status	Normally ok; Turn off and on the scooter to see if the error persists	Normally ok
06	Battery Undervoltage	Check LCD setting P03 and P15; Give battery a full charge to see if issue persists	P03 should be in accordance to the voltage specified in the user manual. P15 should be the specified voltage - 6V
07	Motor Fault	Unplug and plug motor connector back in to see if issue persists	If problem is resolved, then make sure connector is pushed in all the way.
		If issue persists; check motor wire and connector pins to see if there are any issues	Either replace the motor or replace motor wire.



Brake Sensor Activated



ERROR CODES

Error Code	Fault	Diagnostic Step	Resolution
08	Turnstile Fault	Check if back screw or magnet has come loose in the throttle/LCD	Tighten back screw or replace magnet in the throttle
09	Controller Fault	Replace controller	Replace controller
10	Communication Receiving Fault	Unplug and plug in LCD connector and see if issue persists; IF issue persists, then wiggle the LCD wire in different directions to see if problem persists	Change of wiring hardness from LCD to controller might be needed if the issue persists
11	Communication Transmission Fault	Unplug and plug in controller connector and see if issue persists; IF issue persists, then wiggle the LCD wire in different directions to see if problem persists	Change of wiring hardness from LCD to controller might be needed if the issue persists



Brake Sensor Activated



After-sales service

For any problem listed in following table,our distributor will provide perfect after-sales service within the scope of warranty.

Part	Quality issue	Warranty period	Remarks
Motor	Seriously broken rubber wheel hub,faulty motor	12 months	Free repair
Accelerator	Unable to use with normal conditions (except damage caused by impact)	3 months	Free repair
Controller	Fault during normal use	12 months	Free repair
Charger	Fault during normal use	3 months	Free repair
Lithium battery	No output during normal use	12 months	Free repair
Framework	Deformation or fracture during normal use	6 months	Free repair

Attentions for warranty

Faults caused by any of following causes are not within the scope of warranty:

1. Failed to maintain according to this user manual;
2. Damage caused by misuse, traffic accident or accidental collision;
3. Damage caused by riding on abnormal roads or accidental collision;
4. Please do not expose this product under blazing sun or outdoor for along time,as that will speed up the aging process of the product and cause malfunction.
- 5.Quick aging and malfunction of the product caused by dangerous play with the electric scooter,such as acrobatic play;
6. Damage of the vehicle caused by natural disaster or irresistible force;

Note:Pleas efer to the our website for updated information about after-sales,replacement,payable and free warranty.

Start date of warramty extension	(DDMMYY)
Start date of warramty extension	(DDMMYY)
Start date of warramty extension	(DDMMYY)

User information:

Name: _____

Contact number: _____

Email: _____

Address: _____

Product information:

Mode: _____

Repair station: _____



Date of return: _____

Fault description: _____

Fault Cause: _____

Signature of the repairer: _____

NEW MODELS ARE COMING SOON

-  Web:www.vsett.com
-  Facebook:[VSETT](https://www.facebook.com/VSETT)
-  Instagram:[vsett.escooters](https://www.instagram.com/vsett.escooters)
-  YouTube:[VSETT](https://www.youtube.com/VSETT)
-  E-mail:sales@vsett-scooter.com

USER MANUAL

NINGBO VSETT INTELLIGENT TECHNOLOGY CO., LTD

